

IPONG®



megaspin.net


Order from
www.megaspin.net/store



INCLUDED IN THE BOX

- 1. iPong® Core Engine - 1
- 2. iPong® Agitator - 1
- 3. iPong® A/C Adapter - 1
- 4. iPong® Top/Bottom Assembly - 2

U.S. PATENT PENDING

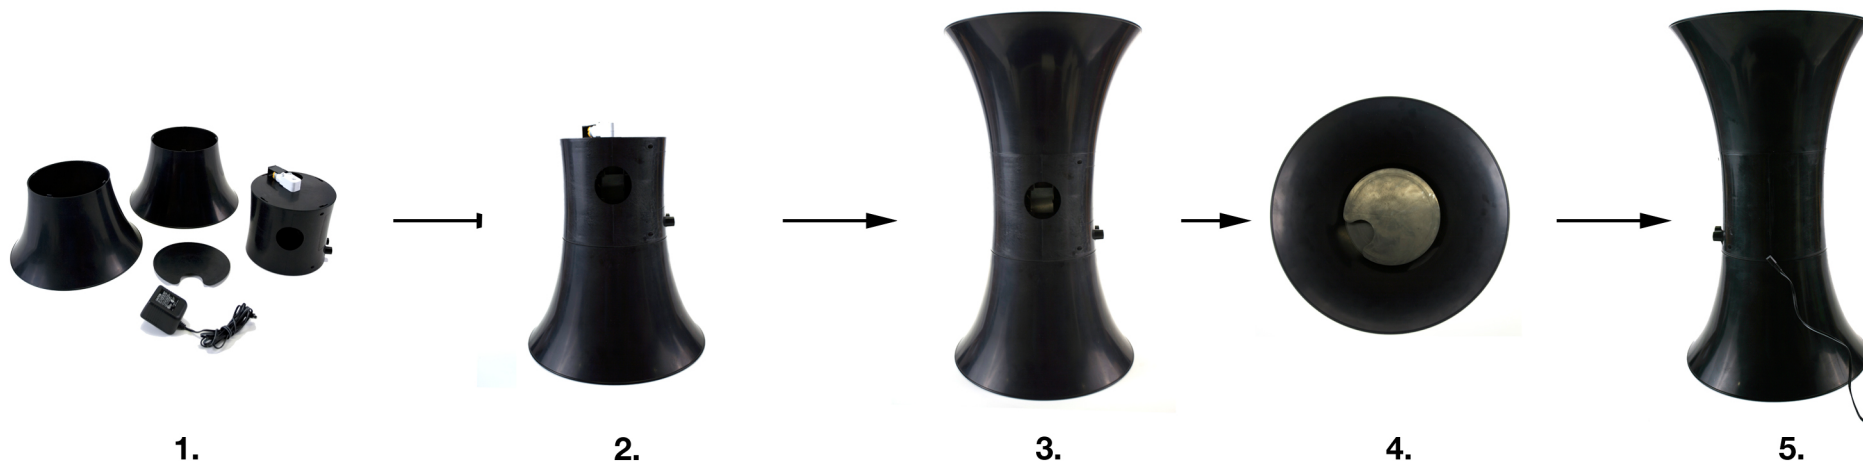

iPONG ASSEMBLY INSTRUCTIONS IN 5 EASY STEPS!

1. Remove contents from the box.
2. Line up the holes from the core engine to the bottom assembly, then twist to lock.
3. Line up the holes from the core engine to the top assembly, then twist to lock.
4. Line up the hole from the Agitator to the plastic rod on the top of the core engine and push to lock.
5. Plug A/C Adapter into rear of Core Engine and plug into wall.

OPERATIONAL INSTRUCTIONS

NOTE:

When starting up iPong®, make sure that there are no balls inside the core engine. Turn the agitator so that the notch in the agitator does not line up to the ball entry hole. This will reduce the possibility of jamming.

1. Rotate agitator so that the ball entry hole is not lined up to the notch in the agitator.
2. Place balls into top assembly.
3. Place iPong® at the opposite end of the table on top of the table
4. Select desired spin using the spin knob.
5. Turn on unit by turning the frequency knob clockwise and adjust frequency.
6. Adjust position of iPong® on table based on user preference.

SPIN & FREQUENCY CONTROLS



Position 1. Underspin - On the Underspin position, iPong® shoots a ball that has a spin that is rotating from under the ball and away from the player. The ball must be struck in a chopping/pushing method and the player can also place heavy topspin onto the ball to lift it over the net.

Position 2. Topspin - On the Topspin position, iPong® shoots a ball that has a spin that is rotating from the top of the ball downwards and away from the player. The ball can be struck with a normal hit through the ball.

Position 3. Heavy Topspin - On the Heavy Topspin position, iPong® shoots a ball that has a high RPM of topspin to the player. The ball must be struck slightly downwards to control the ball from shooting off the end of the table.

Please refer to www.iPong.net for more tips on how to return shots and best make use of your iPong® table tennis training buddy.

OFF

The frequency adjuster turns the iPong® on and also regulates the frequency of balls that shoot out.