


RECYCLING NET UPGRADE KIT INSTALLATION INSTRUCTIONS

Thank you for purchasing the Recycling Net Upgrade Kit. this kit transforms a Robo-Pong 1040 into a more capable Robo-Pong 2040. It also can turn a Robo-Pong 1000 into a 2000. Installation is easy and fast. You will need a #2 Phillips head screwdriver (not supplied).

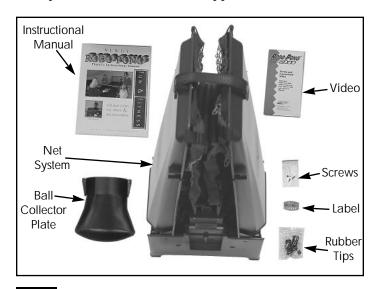


VERIFY ALL PARTS Unpack all the parts from the box and lay them out on a flat surface. Become familiar with each part as shown in this diagram. If uncertain of the identity of a part, look for a small silver tag with the part name on it.


DETACH ROBOT BODY Remove the robot body from the Ball Bucket by loosening the two Wing Nuts holding your robot body onto the Ball Bucket. Then rotate the black, rectangular Clip Washers 180°. Pull the Robot Body off the bucket.



ATTACH BALL COLLECTOR PLATE Using the three Phillips Head screws provided, attach the Ball Collector Plate to the bottom of the robot body as shown. The robot body has a round and a rectangular locating pin that match up with similar shaped holes in the plate.

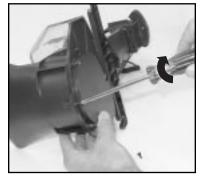


ATTACH LABEL Remove the 1040 label from the head of your robot and replace it with the 2040 label included in this kit.

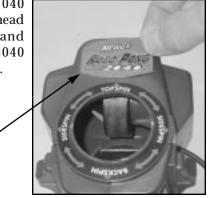


PULL DOWN SUPPORT LEGS Place the net system on the table with the open front side facing you. Pull the curved black metal support legs toward you.

Support Legs


Label

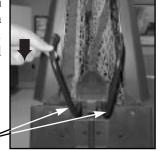

SPREAD SUPPORT LEGS APART Spread out the support legs to their fully open position.

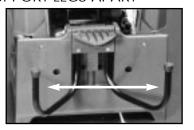

JOIN NET SUPPORT TUBES Turn the robot around 180° so the Net Support Tubes are now facing you. Grasp the second tube from the right and pull up, removing it from its storage hole. Place the bottom of this tube into the top of the first tube on the right as shown. Repeat on the left side.

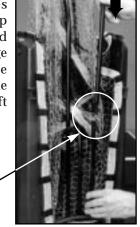

Joining Net Support Tubes


LOWER BALL TRAYS

Grasp one of the Ball Return Trays, lift straight up to unlock it, grasp the adjacent Net Support Tube, and slowly lower them into position. Be careful not to let the tray or support tube slam down. Repeat on the other side.




PREPARE NET SYSTEM

Turn the net system around 180°. Detach the Trap
Net (the black net with large holes) by
unfastening the side velcro strips and flip the net
over the top of the Net Support Tubes as shown to get it
out of the way. Remove the Side Nets from the trays and
let them rest on the table.

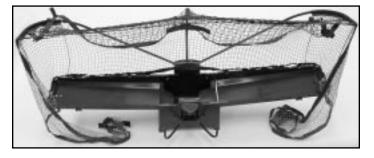


ATTACH ROBOT BODY
Loosen the two Wing Nuts of the Center
Trough. Then mount the robot body onto
the Center Trough. Be sure that the robot
body fits fully down on the locating tab of the Center
Trough. Finally, retighten the Wing Nuts.



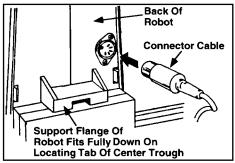




ATTACH ROBOT TO TABLE
Place side Nets back in trays. Pick up the robot by the bottom of the Center Trough and secure it to the table by angling it downward and pushing it onto the end of the table. The Support Legs go underneath the table and the Front Support Plate sits on top of the table. The center of the Front Support Plate aligns with the centerline of the table. The robot will be held by its own weight.

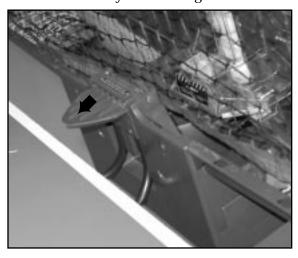

Attach a Side Net to your table tennis net by slipping the slot in the Side Net Extender over the table's net and pressing down. Be sure Side Net follows and is directly above the sideline of the table. Repeat on the other side.

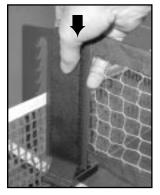

The Owner's Manual that came with your orignal robot explains the other features and adjustments of the Recycling Net System. If you no longer have this manual, you may order one from Newgy customer service or download it online from the Newgy website. The videotape enclosed with this kit is a quick demonstration of how to set up, use, and take down your newly converted robot. The included Instructional Manual shows you strokes, footwork, and other table tennis skills. It additionally describes how to set up an aerobic conditioning program and how to play several fun games and activities with your robot.

Newgy Industries, Incorporated Post Office Box 959 • 805 Teal Dr. Gallatin, Tennessee 37066 USA

Phone: (615) 452-6470 • Fax: (615) 230-9785

Email: newgy@newgy.com • Web: www.newgy.com